

# MODEL MI3050SB and MI3050S

## QUICK REFERENCE GUIDE / OPERATIONAL SUMMARY

CONDITION	ALARM AUDIBLE & VISUAL SIGNALS		RECOMMENDATION
	HORN	RED LED	
New - Out of Package	Silent	Off	To activate the alarm, remove the pull tab. The alarm will sound one long beep to confirm it is powered up. Press the Test/Silence button. Test the alarm following installation and weekly thereafter. The built-in test switch accurately tests the alarm operation as required by ANSI/UL217 Standards for Safety. If, at any time, you test the alarm and it does not perform as described, replace it immediately.
DC Power is Present	Silent	Blinks On once approx every 2 minutes	The alarm is operating properly.
Test/Silence Button Has Been Pressed	3 beeps, 2 second pause, Repeat	Blinks On in sync with Horn	The alarm is operating properly.
Originating Smoke Alarm	3 Beeps, 2 second pause, Repeat	Blinks On in sync with Horn	If hazard is identified, please take all precautions if an alarm sounds by calling an Emergency Service and getting out of the home.
Nuisance Alarm	3 Beeps, 2 second pause, Repeat	Blinks On in sync with Horn	If there is no hazard present, verify the alarm is mounted in the correct location (see User's Manual, "AVOID THESE LOCATIONS" section). Reset alarm as instructed below.
Alarm has Sensed Smoke	3 Beeps, 2 second pause, Repeat	Blinks On in sync with Horn	Silence Feature is activated by pressing and releasing the Test/Silence button on the initiating alarm while in alarm condition. Silence mode will last for approx 10 minutes with the red LED blinking once approx. every 10 seconds.
Alarm has Previously Sensed Smoke	Silent (alarmed previously)	Blinks On once approx every 2 minutes (normal operation mode) or Blinks On once approx every 10 seconds (silence mode)	QUICK FIND® Alarm Origination - The QUICK FIND® feature will allow you to locate the originating alarm (once the alarms have stopped sounding). To initiate QUICK FIND®, press the Test/Silence button on any alarm. After releasing the button, the originating alarm will continue to sound for approx 60 seconds. It is necessary to test each alarm to determine the originating alarm.
Alarm needs to be reset due to varying conditions/previous alarms	Silent	Blinks On once approx every 2 minutes (normal operation mode) or Blinks On once approx every 10 seconds (silence mode)	To reset the alarm, hold the Test/Silence button for approx 10 seconds and release. This will clear Alarm Origination. Reset alarm after every alarm event.
Low Battery	2 chirps approx every 60 seconds	Blinks On once approx every 2 minutes	Deactivate alarm (see User's Manual "ALARM DEACTIVATION" section). Replace alarm immediately.
Product End-of-Service Life Notification	2 chirps approx every 60 seconds	Blinks On once approx every 2 minutes	Deactivate alarm (see "ALARM DEACTIVATION" section in User's Manual). Replace alarm immediately.

**Alarm Reset** - Press and Hold the Test/Silence button for approximately 10 seconds and release. This will clear the Silence Feature and Alarm Origination.

**THIS PRODUCT CONFORMS TO UL STANDARD 217 FOR SAFETY**

If you have any additional questions about the operation of this alarm, please contact our Customer Service Department at 1-800-390-4321, and we will gladly assist you.